ACCESSORIES

Cylinder





CYLINDER LIFTING HANDLE

| handle for RH302, RH303, RH306 and |
|---|
| |
| D, cylinders. |
| handle RHA306, 30 ton cylinder. |
| handle RA552 and RA554, 55 ton cylinders. |
| |
| |

ALUMINUM CYLINDER BASE



Aluminum Cylinder Base – For use when an enlarged cylinder base is needed or advantageous. Attaches to bottom of RA556, RA556L and RA5510 with four 3/8"-16 screws (included). Serrated base for extra stability.

No. 208406 - Aluminum cylinder base, 7" square. For use with RA556, RA556L and RA5510 cylinders.



Quick-Change Inserts



HEAD INSERTS FOR RH SERIES CYLINDERS

| For Use With: | Threaded Insert Order No. | "QUICK | "QUICK CHANGE" HEAD INSERTS FOR RT SERIES CYLINDERS | | | |
|-----------------------|---|------------------------|---|--------------------|--|--|
| RH102, RH108 | 28632 | | | | | |
| RH203 | ³ /4"-16 28612 1"-8 | For Use With: | Threaded Order No.* | Plain Order No. | Switch from a tapped hole to a plain hole guickly with these cylinder head | |
| RH302, RH306 | 38904 1 ¹ /4"-7 | RT172 RT302 | 21669 21873 | 21714 21872 | inserts. They are held in place with a socket screw. Plain hole permits | |
| RH303 | 28644 1 ¹ / ₄ "-7 | RT503 RT1004 | 22274 24197 | 22275 24196 | use of a speed nut for readjusting cylinder after extension. | |
| RH503 | 38855 1 ⁵ /8"-5 ¹ /2 | | | | - , | |
| RH603, RH605 RH606 | 34251 1 ⁵ /8"-5 ¹ /2 | * Provided with cyline | der | | | |